




The Konfort VAS 581 003 displays the message "Contaminated Refrigerant"


PROBLEM:

Before starting the refrigerant recycling phase, the **Konfort VAS 581 003** displays the following message:

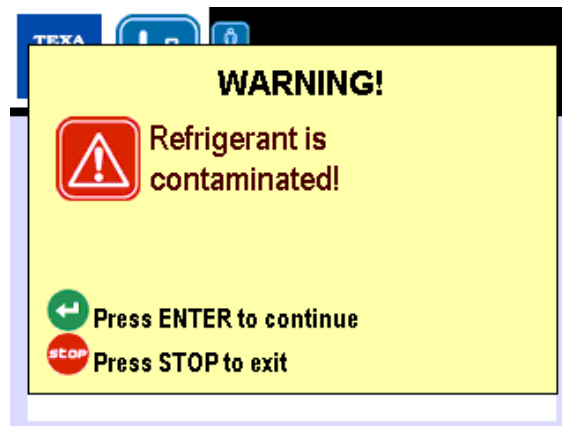

SOLUTION:

- Press the **ENTER** button to confirm the message and follow the instructions. The unit will allow to perform maximum two more measures of the refrigerant purity before stopping the service.
- Start the procedure for the **Identifier Check** by confirming the request which will appear by pressing the **STOP** button to the message "Contaminated Refrigerant" (see above) or by selecting the specific function named **Refrigerant Identifier Check** available from the **Additional Functions** menu:

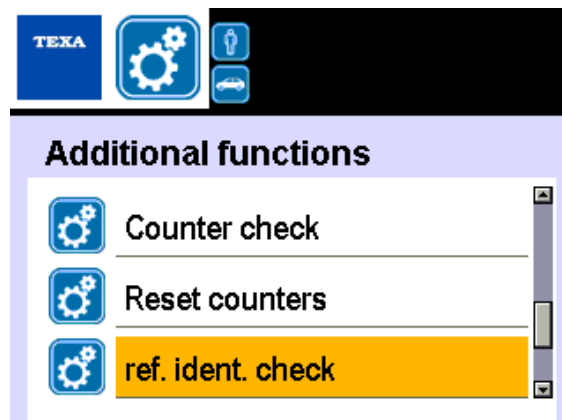

Follow the instructions and check the refrigerant identifier by means of an external R1234yf bottle or by testing it on another vehicle.

Refer to the Konfort VAS 581 003 Operative Manual for further details about the identifier check procedure.

In case the problem would persist, contact your **TEXA Service Provider**.