



The Konfort VAS 581 003 does not perform the recycling phase correctly


PROBLEM:

During the recycling phase, the pressure on the gauges and on the display of the **Konfort VAS 581 003** does not decrease or decreases very slowly:



SOLUTION:

- Make sure that the **quick couplers** will be properly connected and screwed into the corresponding fittings on the A/C system of the vehicle.
- Select, from the **Additional Functions** menu, the option named **Non-Condensable Gas**:

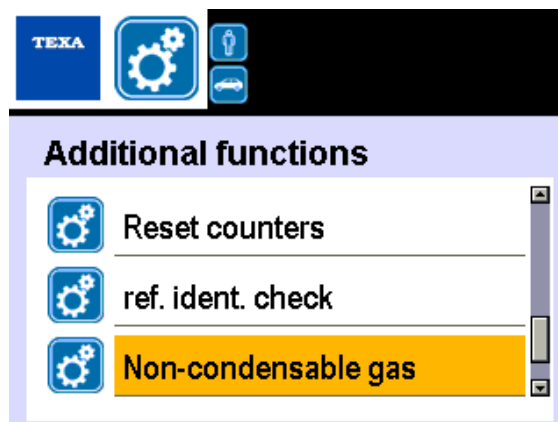

WARNING: The procedure of check/discharge of the non-condensable gases from the internal vessel could require several minutes.

In case the problem would persist, contact your **TEXA Service Provider**.